



Code Changing

BL 5000

Remove the lock from the door.

Remove the 4 red coloured retaining screws from the back of the keypad. Take extra care to keep the keypad on a flat surface when removing the cover plate as this has several springs attached.

You will now see there are 4 red coloured coded tumblers and 6 blue coloured un-coded tumblers plus 1 clear tumbler (C button).


To change your code **push the C button and hold it**. You can then easily remove one or more of your coded and un-coded tumblers using the tweezers supplied.

Please note you should **never remove the C tumbler or take your finger off of the C button when changing your code**.

Please note the different shapes of tumblers before reinserting them into the lock body. Firstly there is a difference in shape between the coded and un-coded tumblers as illustrated below, Secondly when refitting the tumblers into the lock body they must be fitted facing the correct way, again see the illustration below. All square cut-outs must face outwards. Once inserted correctly the dimple on the tumblers will sit in the cut-out on the coding chamber.

After you have refitted the tumblers and have made a note of the new code please replace the metal plate and the 4 red screws.

Please note-with the tumblers provided you can either increase the number of digits in your code to 5-6 or reduce to 2-3.

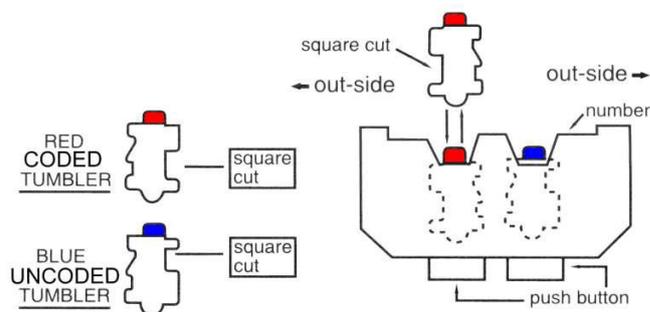

Please call our helpline for spares, repairs and technical advice – 01708 225700



Monthly

Clean the surface of the keypad and all of the exposed elements of the latch assembly with a light spray application of a silicon based lubricant such as GT85 or other. Remove any excess with soft cloth.

Do not use oil based lubricants such as WD40. Oil based products will attract dirt. A Silicon based lubricant will also help to displace water away from the internal mechanisms.

Annually

1. Remove the lock from the door.
2. Spray the inside of the lock with GT85 or other silicon based lubricant through the tumbler holes on the reverse of the keypad. Remove any excess with soft cloth.
3. Spray all of the fixings, accessories and latch with GT85 or other silicon based lubricant.
4. Push each of the buttons and rotate the knob several times to ensure that the lock is working smoothly and that all buttons return to their outward position.

Remarks

The above maintenance procedures can be carried out whenever the operation of the lock is sticky or the code is accepted intermittently. If for whatever reason the above instructions do not solve the problem, please call our free phone helpline on 0800 44 88 377.

BORG LOCKS UK LTD.

9, Upminster Trading Park, Warley Street, Upminster, Essex RM14 3PJ

Tel. 01708 225700 Fax. 01708 226338

Email : sales@borglocks.com

www.borglocks.com