

Wedge Installation Instructions

Application:


- Opposing tongue allows smooth motion from closed to venting position

Tools Required:

- Drill
- 3.5mm Drill Bit
- Screwdriver
- Marker pen


1. Attach fastener

- Turn fastener to open position
- Position fastener onto window sash, ensuring sufficient tongue engagement and clearance from the frame
- Mark and drill hole position
- Attach fastener

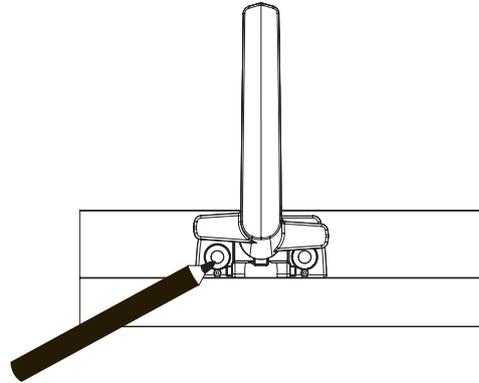


4. Install wedge in open position

- Window fastener must be in the fully opened position to install wedge
- Wedge must be inserted in the open position rather than in the closed position

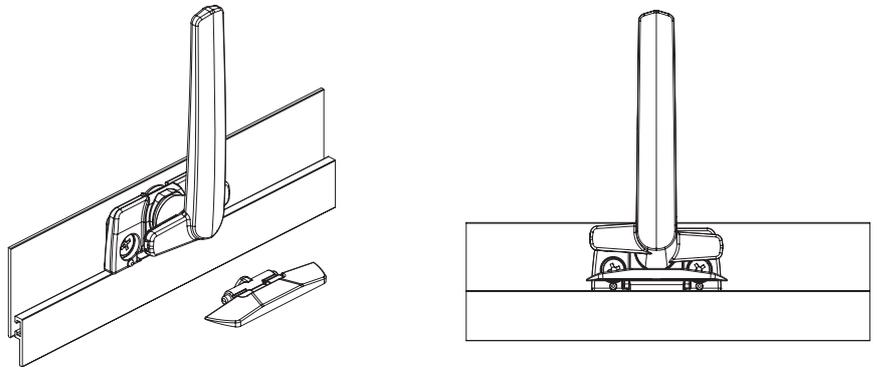

5. Fit handle cover onto fastener

- The cover must be fitted before the handle lever is operational

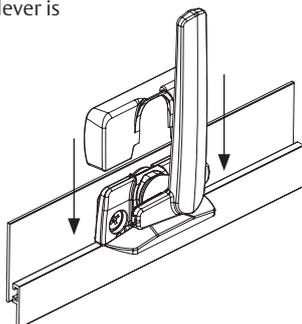

6. Check operation

- Check operation of the handle and engagement of the tongue on the window frame

Important: Do not operate handle without cover fitted.

