

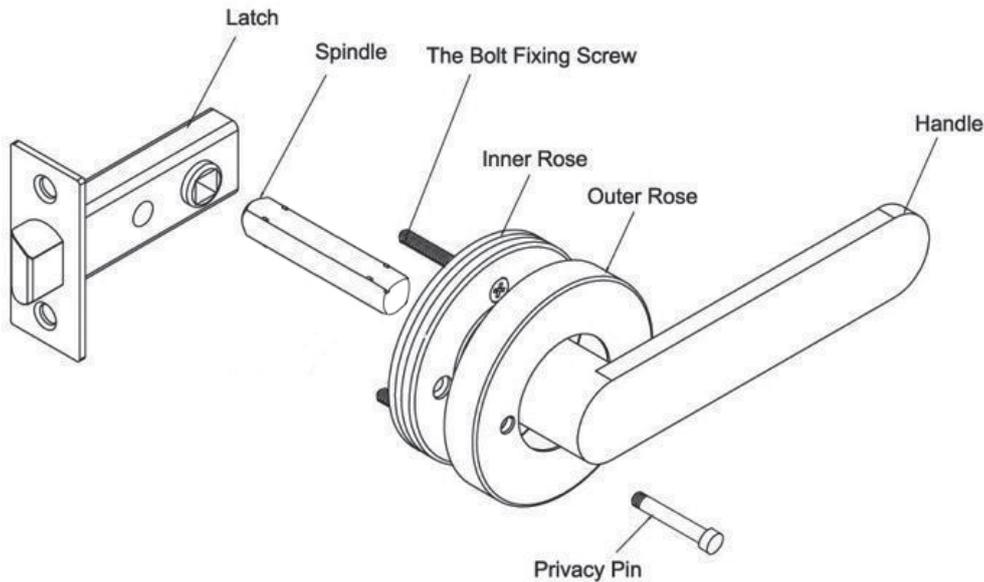


Milano Integrated Privacy Set Installation Instruction

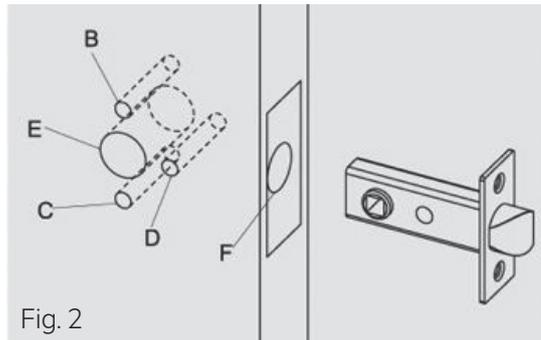


1. Using the template below, mark drilling centres into the door.
2. Drill holes A to F as indicated in figure 1 and figure 2 and the latch.
3. Insert spindle into handle shaft as shown on both sides of the door.
4. Insert and tighten two tie bolt screws to secure the levers.
5. Insert privacy pin on inside rose.
6. There is no warranty covered for incorrect installation.

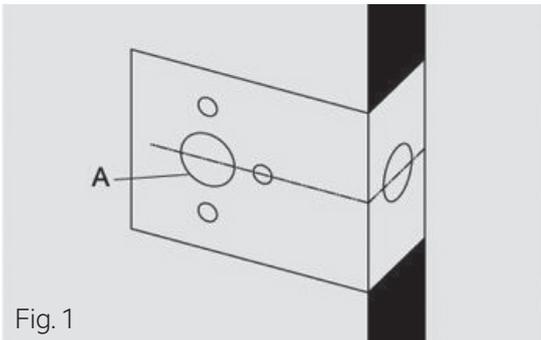

INSTALLATION TEMPLATE.

Important: double check dimensions if printing from an electronic version

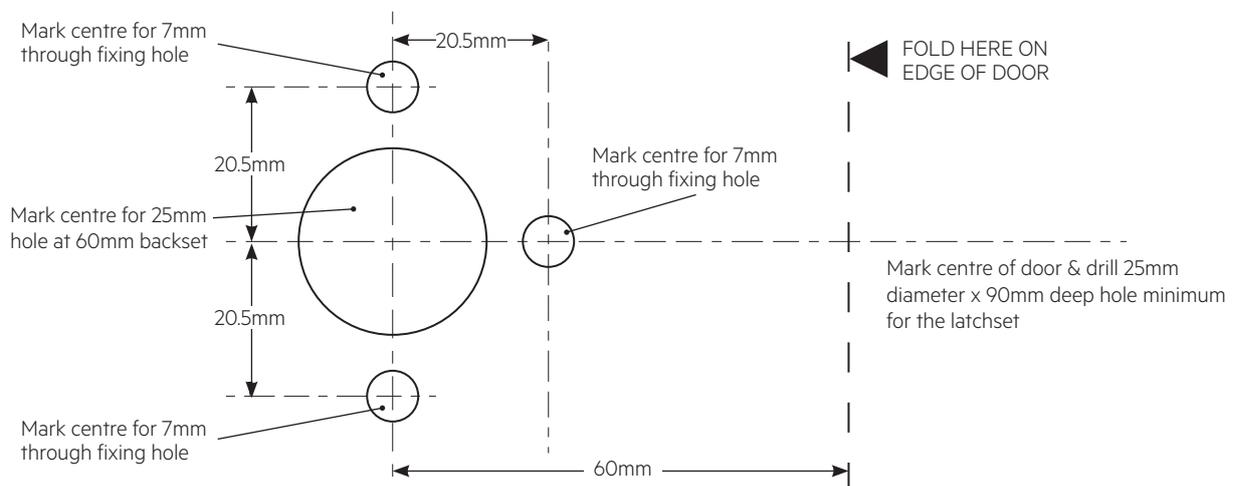

SEPT-2020