

# Steadfast Holdback Door Stop Range

Hinged Door Accessories

INTERLOCK™

ASSA ABLOY

ASSA ABLOY, the global leader  
in door opening solutions.


## Installation Instructions

**Application:** Designed to cushion the opening of hinged and folding doors and hold them open.


### Tools Required:

- Drill
- Pencil
- Tape Measure
- Screwdriver


### Pack Contents:

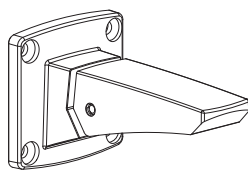

Wall Mount Base and Arm

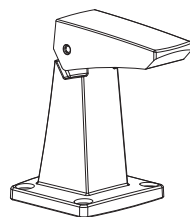


Floor Mount Base and Arm

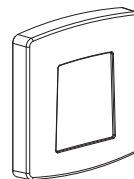


Wall or Floor Mount  
Screw Cover

OR




Door Mount Screw Cover




Strike



Bumper

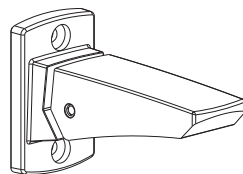


Door Mount Base and Arm

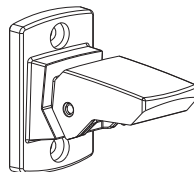


Door Mount Base and Short Arm

### Installation Dimensions:


#### Wall and Door Mount Version

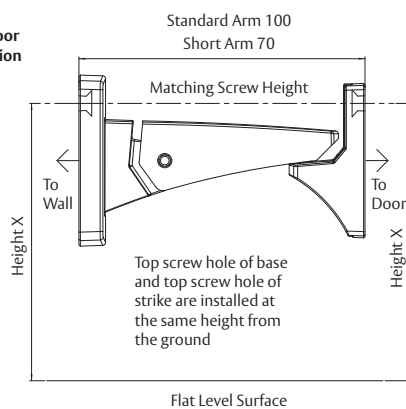


#### Wall Mount Base

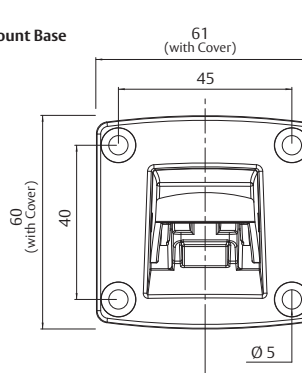


#### Door Mount Base

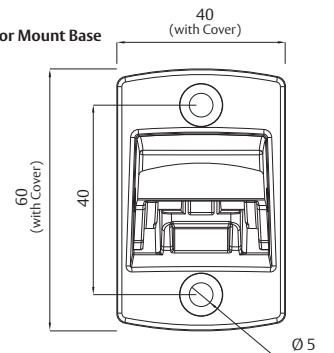


#### Floor Mount Version

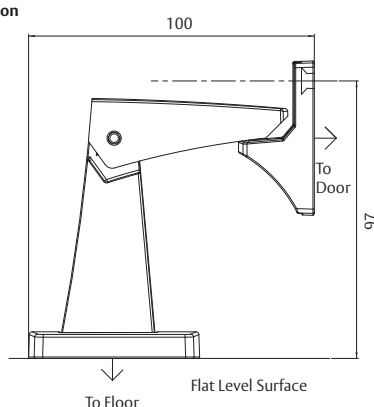

#### Floor Mount Base

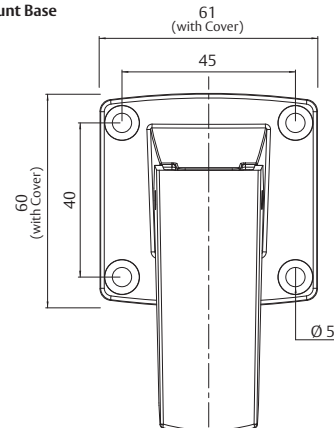


#### Strike

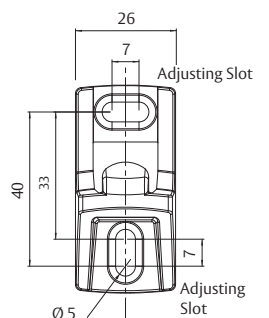

## 1. Fixing Base

- Check strike will fit on door before fixing
- Fix base to floor or wall

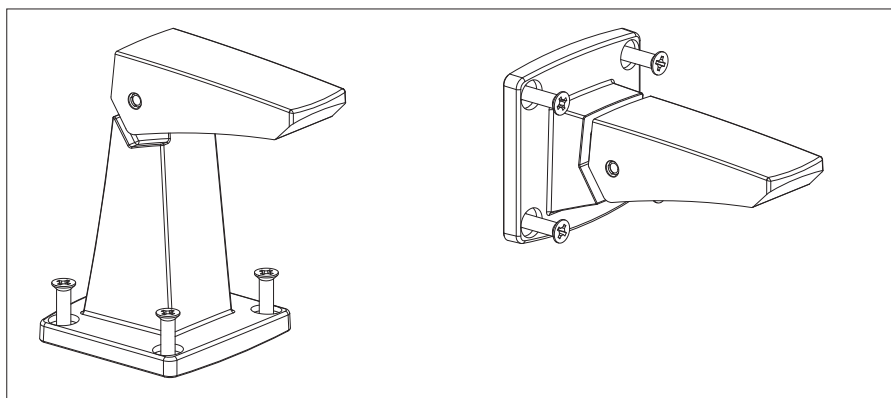



## 2. Fixing Strike

### a) Position strike

- See *Installation Tips* for correct strike position
- Mark screw holes on door

### b) Fix strike

- Drill strike screw holes
- Fix strike in place

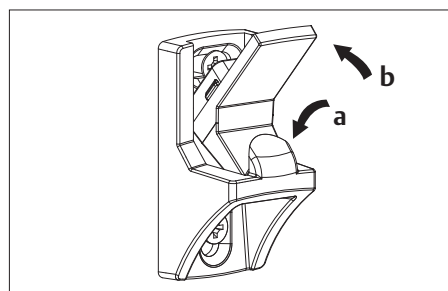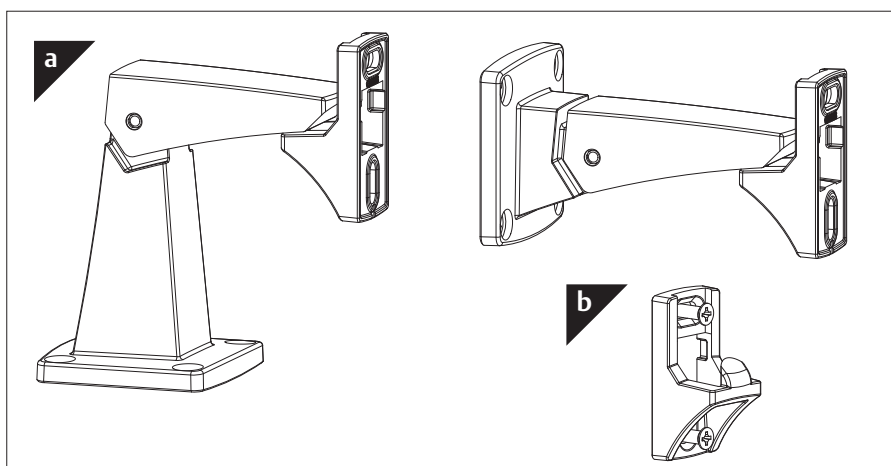


## 3. Fitting Rubber Bumper

- Place rubber bumper into recess (**a**)
- Push bumper down and back (**b**)

## 4. Fitting Screw Cover

- Press screw cover over base

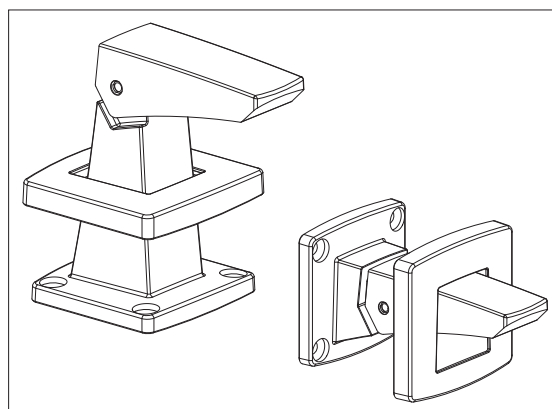

## Installation Tips

- Keep arm level when installing the strike (at rest position)

Adjust if necessary

### To adjust strike up/down

- Remove **top** strike screw
- Loosen bottom screw and adjust
- Re-drill **top** screw hole and fix in place

### To adjust strike side to side

- Remove **bottom** strike screw
- Loosen top screw and adjust
- Re-drill **bottom** screw hole and fix in place

