

Induro[™] Mortice Lock

Palladium Furniture, 2-Point

Installation instructions

M4 x 60mm

M4 x 65mm

46 - 55mm

55 - 58mm


plication: Provides secur rs. Palladium Xtra furniture	e deadlocking for aluminium hingeo available with daylatch snib.	Tools req	 Drill 3.2mm drill b 	 20mm drill bit Phillips screwdriver #2 Square screwdriver #1
ck Contents:				
			e	
2-Point Lock (30mm backset shown)	Exterior fu (Aria furnitu	urniture re shown)	Interior fu (Aria furnitu	
U U ₩ 8g>	nder fixing screw	sch packer La	atch wear pad	92mm drive bar (spindle)
Screw selection:	Stile width			
M4 x 49mm	38 - 43mm		DI	
M4 x 55mm	43 - 49mm		<u>o</u> <u>or</u>	
M4 x 55mm	43 - 49mm		<u>or</u>	


Cylinder double key

Cylinder key & turn knob

1. Door preparation

Route the door as shown in the routing diagram. Note: For Palladium Xtra Furniture, see separate instructions.

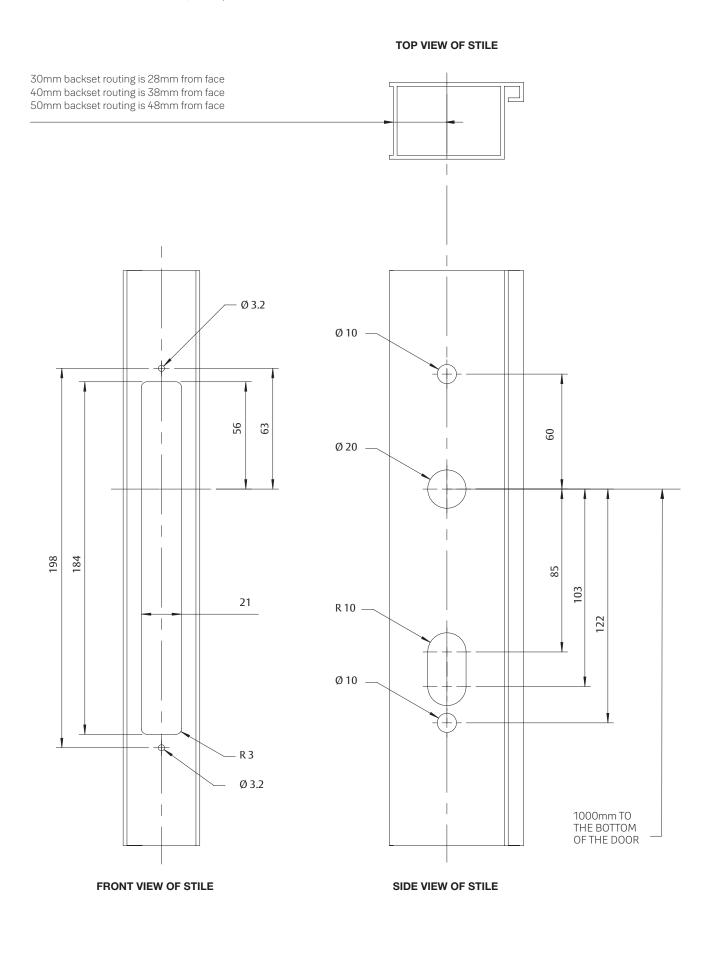


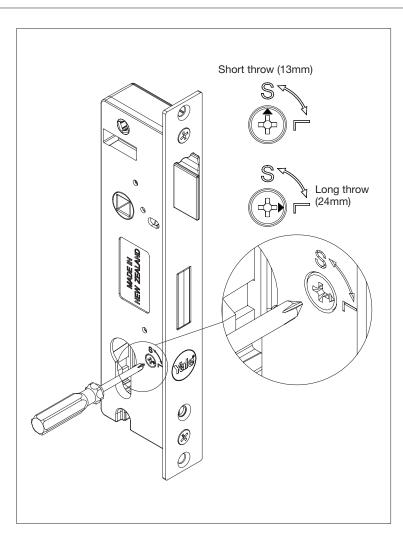

2. Setting deadbolt projection

- Before fixing the lock into the stile, select the correct deadbolt throw.
- To restrict the throw to 13mm select S
- To restrict the throw to 24mm select L
- Ensure the arrow is pointing to the desired throw application.

Note: When lock has 13mm projection selected the key must be rotated once to deadlock. When lock has 24mm projection selected the key must be rotated twice to deadlock

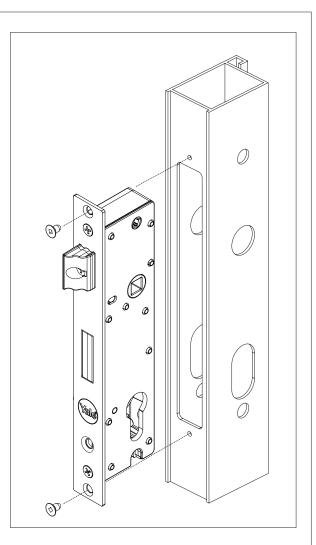


3. Fixing lock


- Place the lock assembly into the stile
- Fix the lock onto the stile using the two 8g x 7.5mm screws

4. Fixing furniture and cylinder

- Insert the drive bar (spindle) through the square drive hole in the lock
- Place the furniture onto the drive bar. For security, ensure the interior handle is on the inside of the house
- Place the cylinder through the cylinder hole
- Fix cylinder using the supplied M5 cylinder fixing screw as supplied
- Fix together the furniture using the two M4 furniture fixing screws. See screw selection chart to determine correct screw length

Note: If fixing Palladium Xtra Furniture with daylatch snib, refer to separate Palladium Xtra Furniture instructions enclosed.

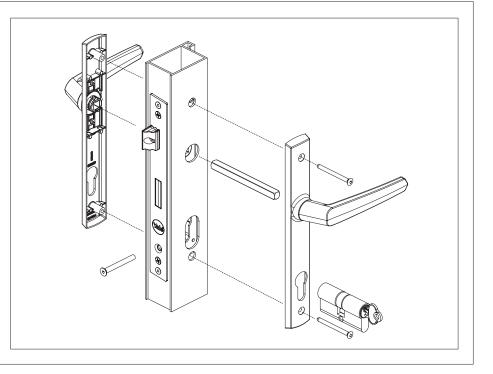

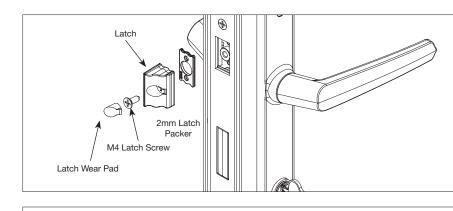

5. Latch reversal

- Undo the M4 latch screw
- Reverse the latch as desired
- Refasten the M4 latch screw to secure the latch
- Insert the latch wear pad

Note: 2mm Latch Packer is provided to allow for latch projection adjustment. An additional 2mm packer is available for purchase.

6. Lock operation


Deadlocking operation

- Pull the door shut. The door will self-latch
- Turn the key towards the edge of the door to deadlock Note: For 13mm, turn the key once only For 24mm, turn the key twice
- The door is now secure from exterior and interior

Opening operation

- Turn the key away from the door edge to deactivate the deadlock Note: For short throw, turn the key once only For long throw, turn the key twice
- Retract the latch

Do I need to tap holes?	No. All screws are self tapping.		
The furniture screws do not tighten	Ensure the screws line up with the screw boss on the exterior handle.		
Do I have to use the supplied screws?	For best performance, it is recommended that only the supplied screws are used.		
The key function does not operate	Ensure the motion of the latch is not restricted.		
Cannot achieve 24mm deadbolt throw	Ensure locks deadlock is set to 'L'. Turn key twice.		

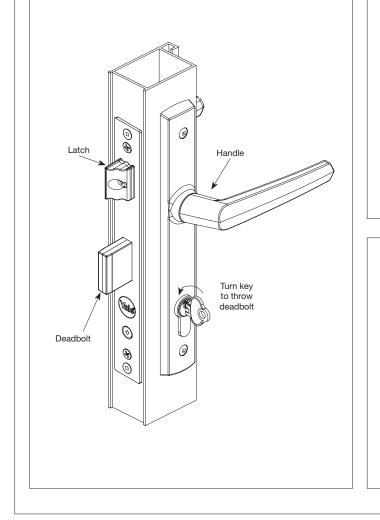

10 Year Warranty: The warranty covers manufacturing defects, standard finishes but excludes plated finishes or finishes exposed to a corrosive environment. The warranty excludes damage caused by installation contrary to written instructions and incidental or consequential damage. We recommend regular cleaning with mild detergent.



ASSA ABLOY New Zealand Limited 6 Armstrong Road, Albany Auckland 0632, New Zealand www.yalehome.co.nz For customer feedback: nzsales@assaabloy.com ASSA ABLOY Australia Pty Limited 235 Huntingdale Rd, Oakleigh, VIC 3166 ABN 90 086 451 907 ©2019 1300 LOCK UP www.yalehome.com.au

